

BULOVA LISTA FORNITURA / SUPPLY LIST

BULOVA 214

- Ref. **112** – Ruota Indice e Pignone / Index Wheel and Pinion;
- Ref. **123** – Vite Molla Ruota Rinvio / Screw for Setting Wheel Spring;
- Ref. **125** – Vite Ponte del Ruotismo / Train Bridge Screw;
- Ref. **131** – Vite Ponte Centro / Center Bridge Screw;
- Ref. **162** – Batteria Dedicata / Battery Cell;
- Ref. **180** – Ponte Cricco (Pawl) / Pawl Bridge and Finger Assembly;
- Ref. **183** – Vite Diapason / Tuning Fork Screw;
- Ref. **184** – Vite Ponte Cricco (Pawl) / Pawl Bridge Screw;
- Ref. **191** – Vite Platina Ritegno Bobina / Screw for Coil Lead Retainer Plate;
- Ref. **711** – Circuito completo / Coil Assembly.



BULOVA 218 (2180)

- Ref. **112** – Ruota Indice e Pignone / Index Wheel and Pinion;
- Ref. **125** – Vite Ponte del Ruotismo – Vite Ponte Cricco (Pawl) / Train Bridge Screw – Pawl Bridge Lock Screw;
- Ref. **148** – Vite Quadrante / Dial Screw;
- Ref. **151** – Vite Modulo Bobina / Coil Form Screw;
- Ref. **176** – Albero Messa Ora / Setting Stem;
- Ref. **184** – Vite Perno Ponte Cricco (Pawl) / Pawl Bridge Pivot Screw;
- Ref. **205** – Tiretto / Setting Lever;



- Ref. **207** – Pignone Scorrevole / Clutch Wheel;



- Ref. **209** – Vite Tiretto / Setting Lever Screw;
- Ref. **230** – Ponte Cricco (Index) / Index Finger Assembly;
- Ref. **231** – Ponte Cricco (Pawl) / Pawl Finger Assembly;
- Ref. **304** – Vite Brida Batteria / Cell Strap Screw;
- Ref. **305** – Vite Quarto Ponte / Fourth Bridge Screw;
- Ref. **309** – Vite Bascula / Yoke Screw;
- Ref. **315** – Ground Screw;
- Ref. **320** – Casing Spring Screw;
- Ref. **321** – Center Second Brake Spring Screw;

- Ref. 712 – Componente Bobina Assemblato/ Component Coil Assembly;



- Ref. 715 – Cella Bobina Assemblata/ Cell Coil Assembly;

